

25 WIRING DIAGRAM

25.1 V 1000 G 5 (fig. 203) - LEGEND

- 1 Tachometer (bulb 3 W)
- 2 Additional light (bulb 5 W) only on request
- 3 High beam warning light (bulb 1.2 W) «H»
- 4 Oil pressure warning light (bulb 1.2 W) «OIL»
- 5 Neutral position warning light (bulb 1.2 W) «N»
- 6 Town driving warning light (1.2 W) «I»
- 7 Generator charge warning light (bulb 1.2 W) «GEN»
- 8 Low beam { bulb 40/45 W
- 9 High beam { bulb 40/45 W
- 10 Turn signal light, front, right (bulb 21 W)
- 11 Turn signal light, front, left (bulb 21 W)
- 12 Engine starting and stopping button
- 13 Additional light switch
- 14 Rev-counter (bulb 3 W)
- 15 Horn (absorption 3.5 A)
- 16 Front brake cutout
- 17 Flashing light switch (flash)
- 18 Rear brake cutout
- 19 Battery
- 20 Regulator
- 21 Rectifier
- 22 Alternator
- 23 Starter motor relay
- 24 Starter motor
- 25 Switch on clutch control cable
- 26 Turn indicator light
- 27 Rear stop light (bulb 21 W + 21 W)
- 28 Number plate light (bulbs 5 W + 5 W)
- 29 Turn indicator light (21 W), right
- 30 Flasher unit, turn lights
- 31 Oil pressure switch (on crankcase)
- 32 Parking light, front (bulb 4 W)
- 33 Terminal block with fuses (16 A fuses)
- 34 3-way connector
- 35 4-way connector, AMP
- 36 Contact breaker
- 37 Coils
- 38 Ignition switch (3 positions)
- 39 Rear turn signals switch
- 40 2-way connector
- 41 Spark plugs
- 42 Switch controlling turn indicators, flashing lights, light switch and horn
- 43 Warning light, right turn indicator (bulb 1.2 W)
- 44 Warning light, left turn indicator (bulb 1.2 W)
- 45 Warning light indicating «side stand» in park position
- 46 Brake fluid level warning light
- 47 Fuel level indicator
- 48 4-way connector AMP
- 49 Connection
- 50 Brake fuel level indicator
- 51 Fuel level indicator
- 52 Electrovalve (2.5 W)
- 53 Coil control device
- 54 Commutator for side stand warning light «park» position
- 55 Rear parking light (bulb 5 W + 5 W)

