Key to cable colors

	<u>'</u>
Black	Battery V to starter motor relay Z
Red	Regulator U 51B+ to battery V+
Red	Battery V to ignition switch Q
Grey-red	Generator T to regulator U (D+)
White	Generator T to regulator U (DF)
Black	Terminal with fuses C to stop cut-out O
Yellow	Distributing block D to tail light bulb R
Green	Neutral cut-out N to warning light F on
	speedometer
Brown	Ignition switch Q (50) to starter relay Z
Blue-	Terminal block C to H.T. coil I
black	
Grey	Oil pressure cut-out P to speedometer L
Red	Generator T to warning light D on
	speedometer L
Black	Distributing block D to horn M (T-)
Red	Terminal block with fuses C to ignition
	switch Q
White	Distributing block D to warning bulb Q in
	speedometer L
Yellow-	Distributing block D to warning light LA on
black	speedometer
Brown	Terminal block C to ignition switch Q
	(Int.)
White-	Terminal block C to speedometer L
black	
Green	Distributing block C to light switch E
	Red Red Grey-red White Black Yellow Green Brown Blue- black Grey Red Black Red White Yellow- black Brown White- black

20	Green-	Distributing block D to light switch E
	black	
21	Grey-red	Distributing block D to light switch E
22	Brown	Terminal block C to light switch E
23	Black	Distributing block D to light switch E
25	Black	Stop light cut-out O to tail light bulb S
26	Black	Regulator U to ground
27	Black	Battery V to ground
28	Black	H.T. coil I to contact breaker H
29	Black	H.T. coil I to distributor G
30	Black	Distributor G to spark plug F
31	Black	Distributor G to spark plug F
37	Black	Distributing block D to ground
41	Green-	Distributing block D to high beam filament
	black	В
42	Green	Distributing block D to low beam filament
		В
43	Black	Headlight bulb B to distributing block D

Ignition switch positions


0	
1	30/30 int.
2	30/20 int. 15/54
3	30/30 int. 15/54 50

Legend


Α	Headlight
В	Main light bulb
С	Terminal block with fuses
D	Distributing block
Е	Light switch and horn button
F	Spark plug
G	Distributor
Н	Contact breaker
1	H.T. coil
L	Speedometer and warning light bulbs
M	Horn
N	Neutral indicator cut-out
0	Stop light cut-out
Р	Oil pressure cut-out
Q	Ignition switch
R	Number plate and tail light
	Plate illumination and stop light
T	Generator
U	Regulator
V	Battery
Z	Starter motor relay
X	Starter motor



WI

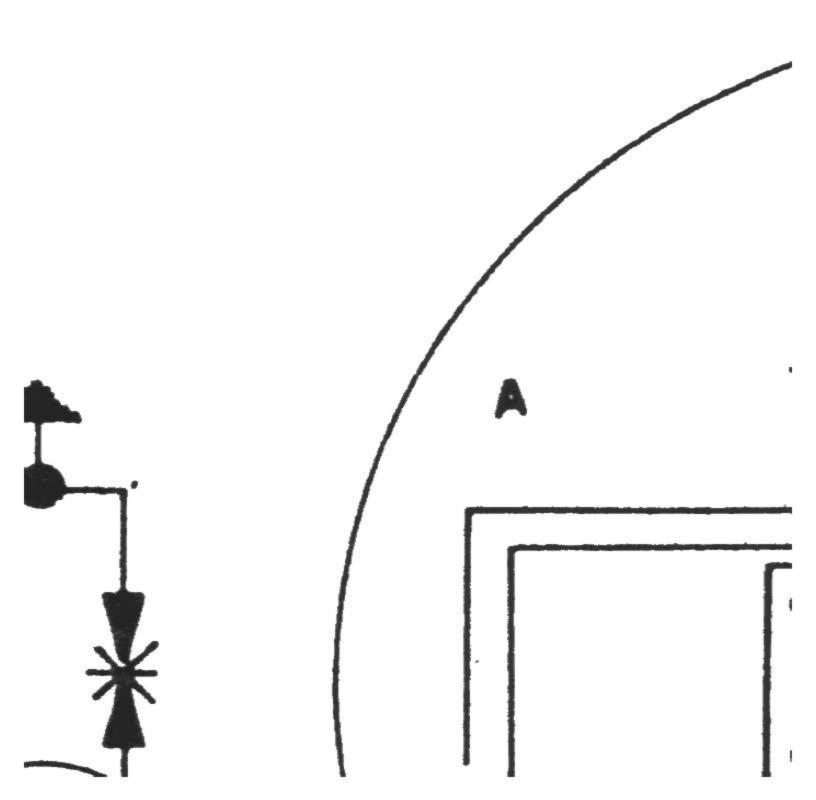



RING DIAGRAM!

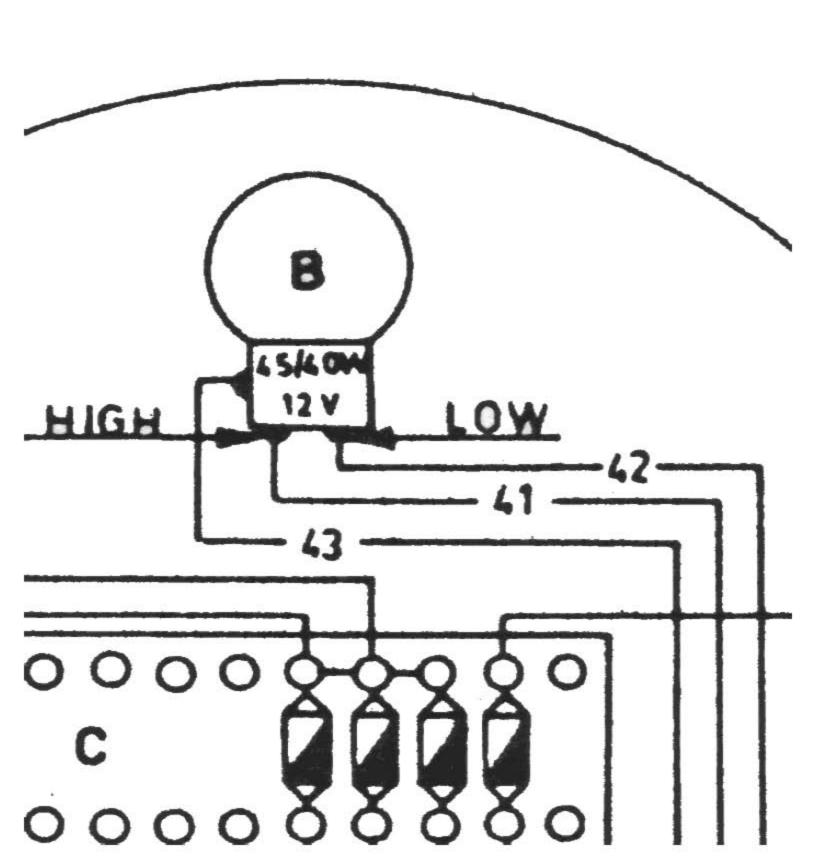







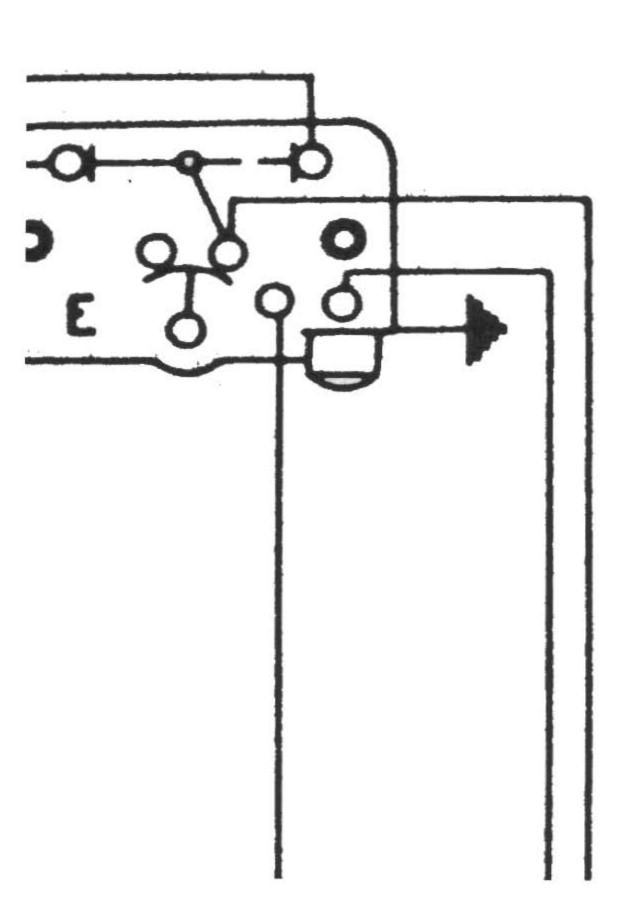


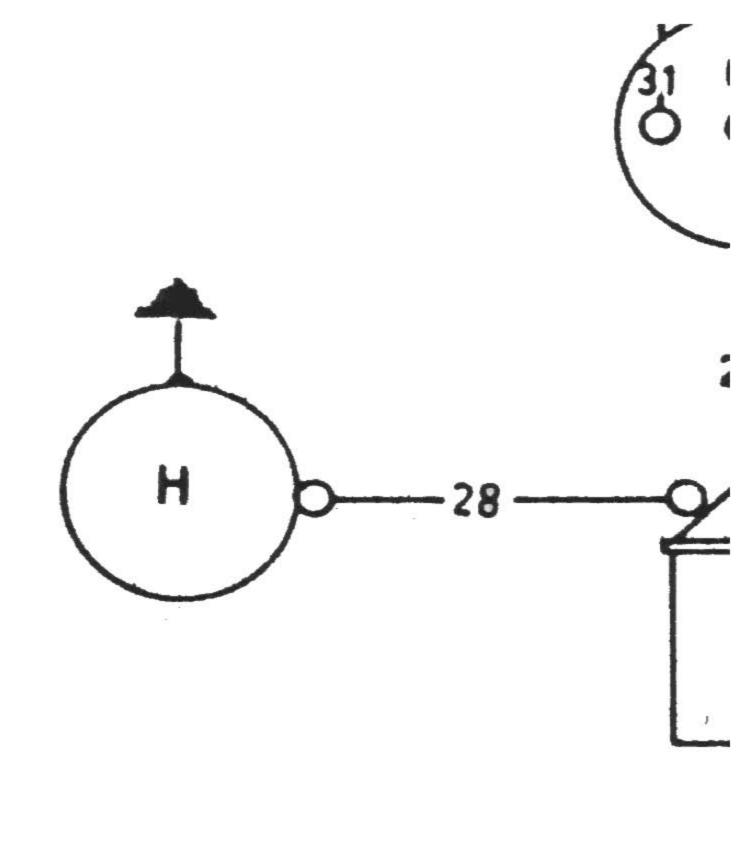



U

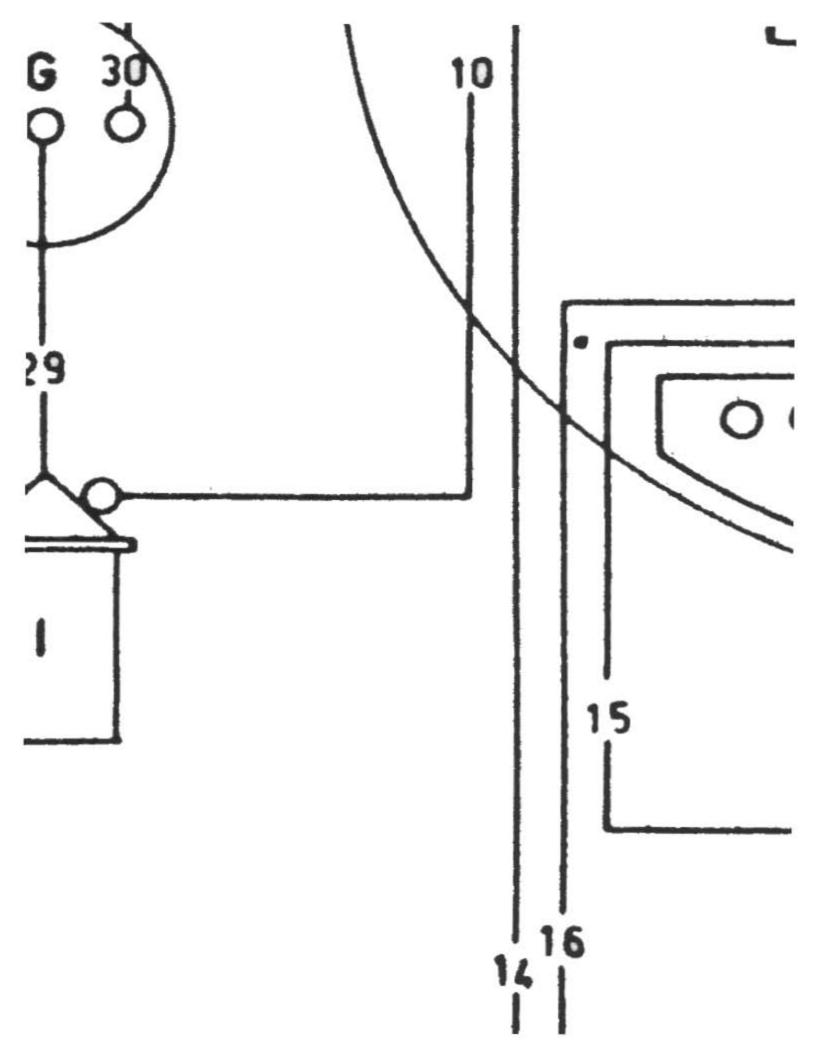


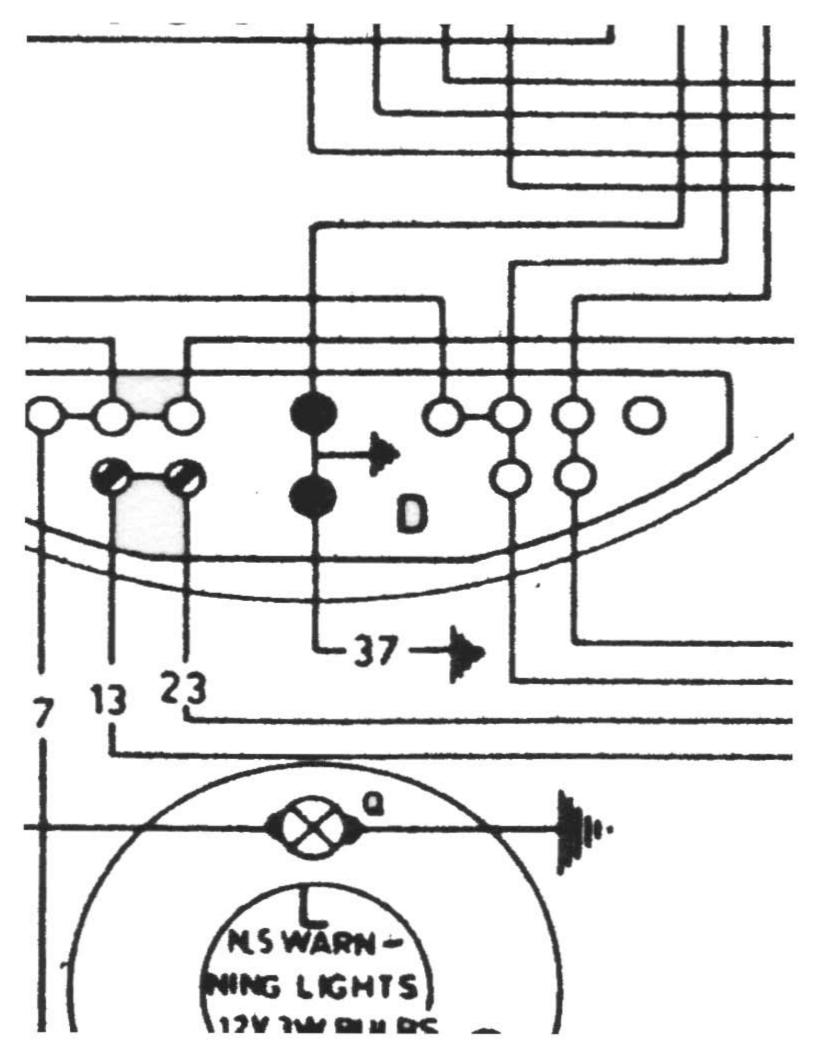


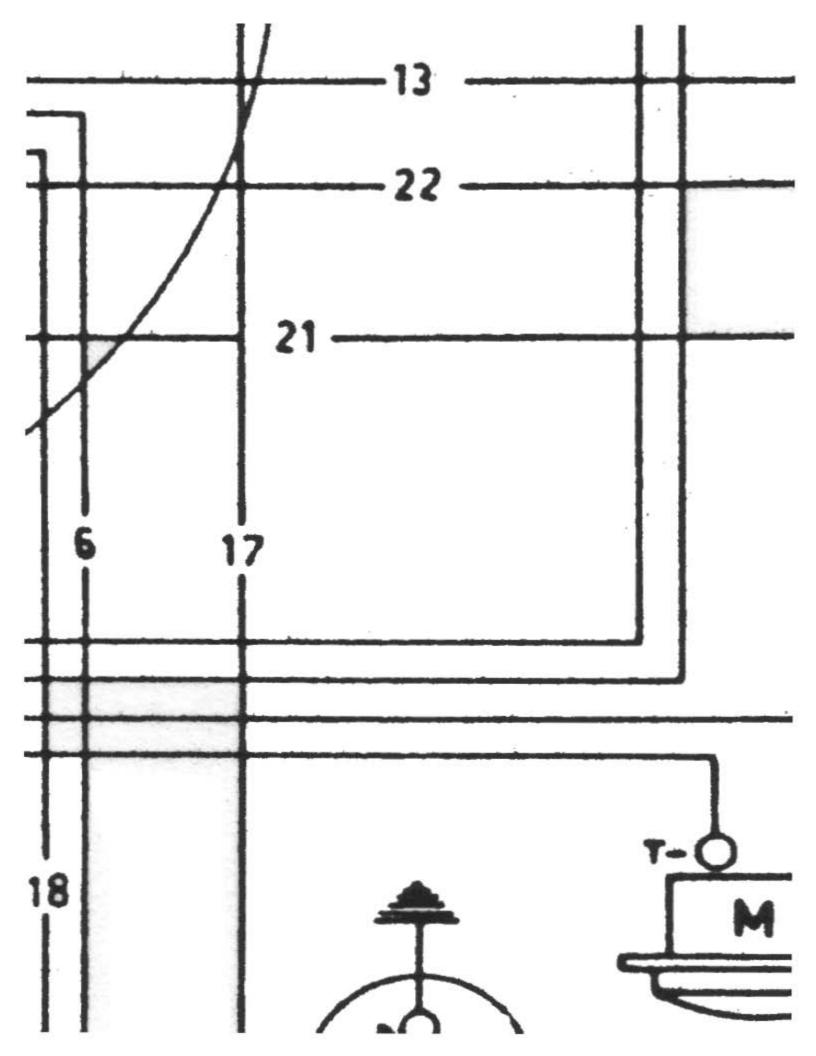


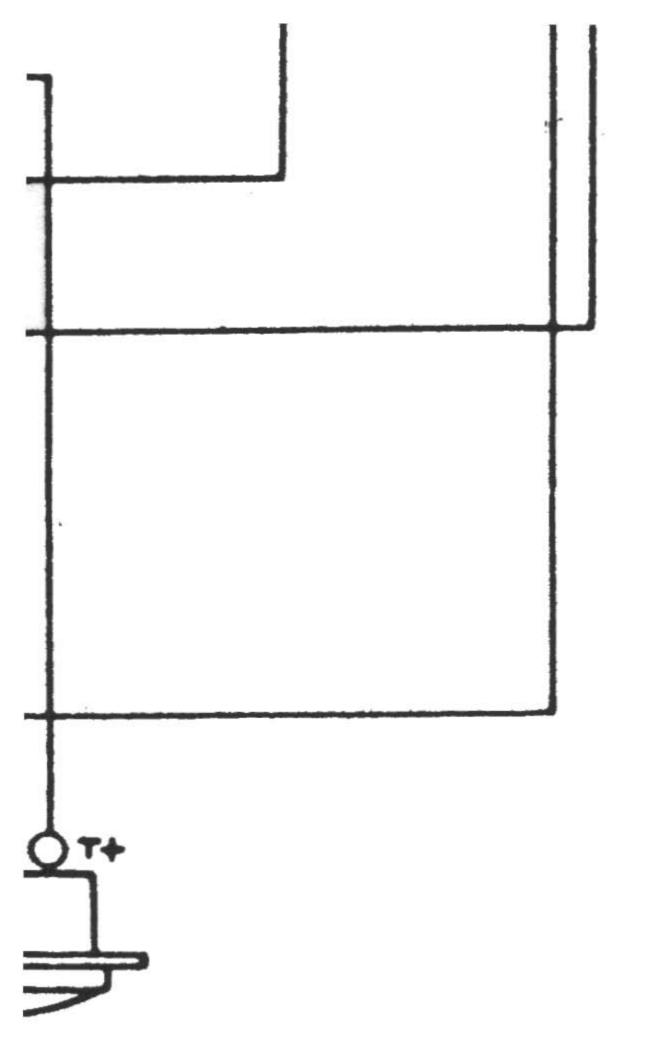

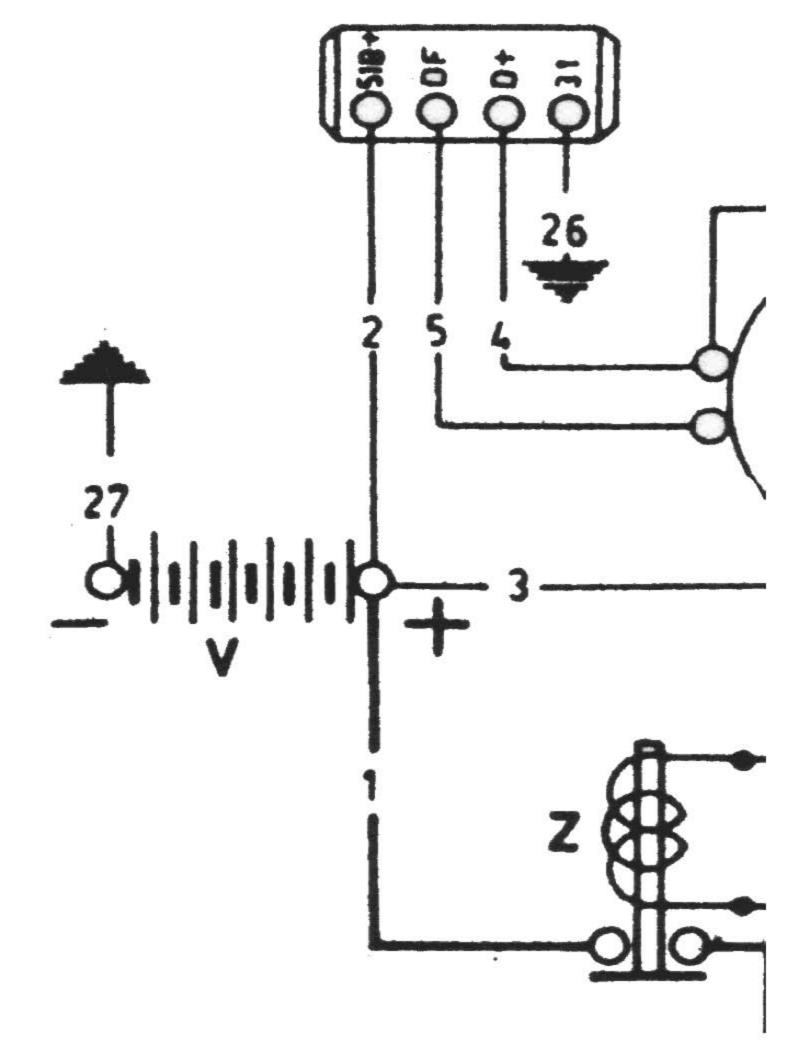

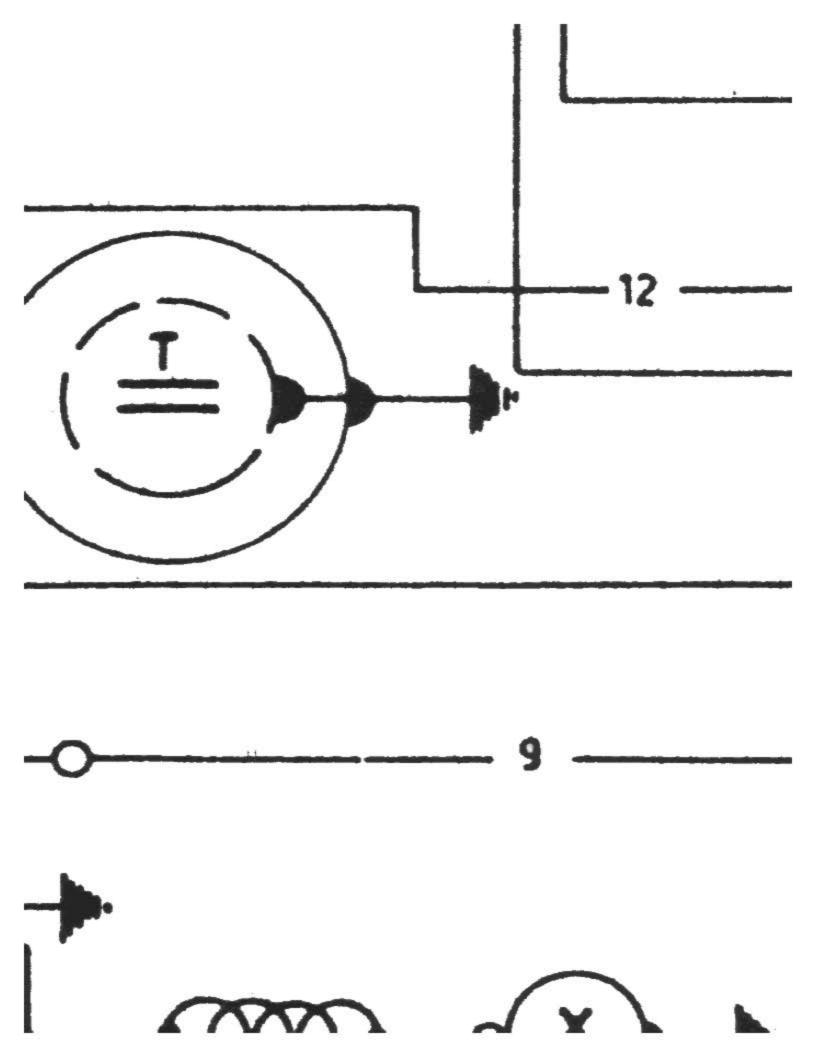

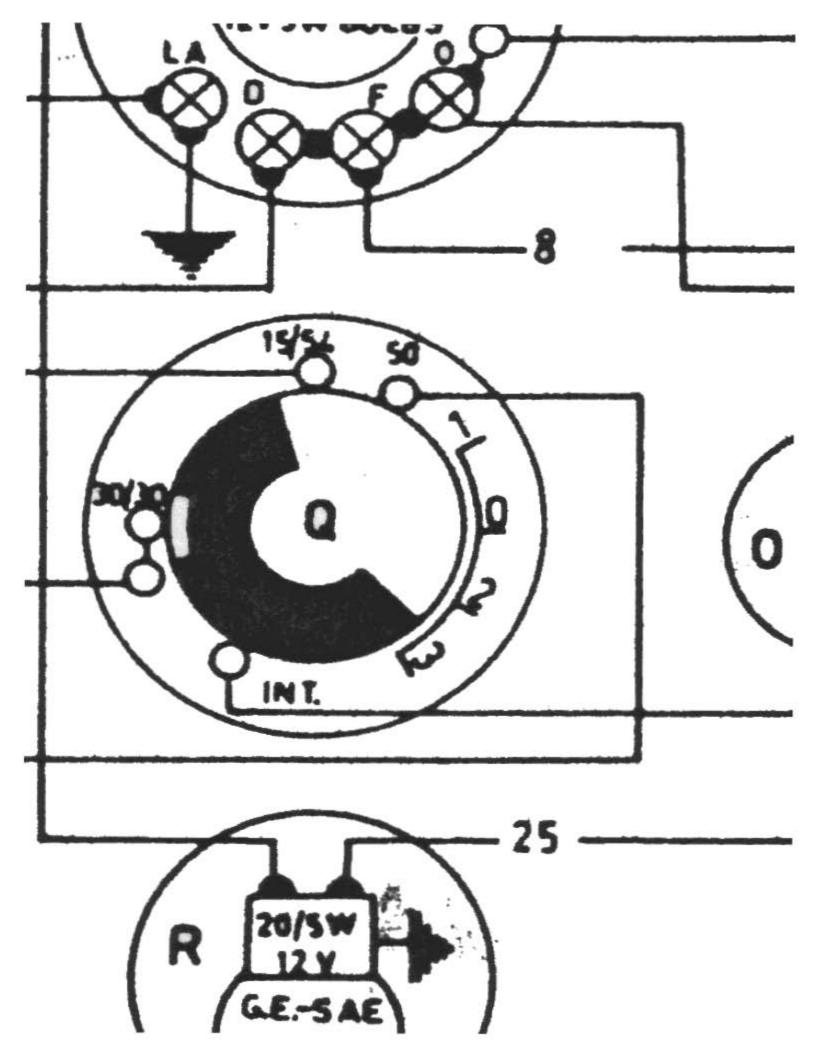

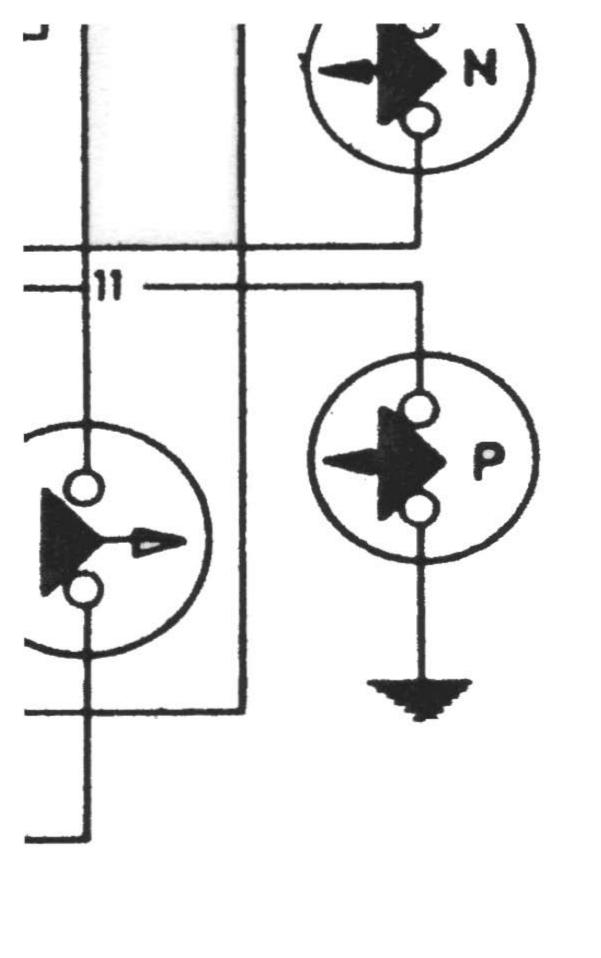

	,		

Wiring

1834

diagram (V700 USA n

nodel)